

QUICK RELEASE BRACKETS



STREAMLINE BALLOON FORMING PRODUCTION WITH QUICK RELEASE BRACKETS

- Simplify water jacket installation and exchange
- Reduce machine set-up time to allow increased production throughput
- Capable of handling a wide range of balloon diameters and lengths
- Streamline balloon manufacturing process to decrease production costs

DESCRIPTION


The Quick Release Brackets for the Interface Balloon Forming Machine are designed to simplify the water jacket installation and exchange process, which will substantially reduce production set-up time and improve manufacturing throughput.

Interface Catheter Solutions is known for manufacturing balloon forming equipment that delivers consistent performance, reduced cycle times and increased yields, along with real-time balloon forming profiling.

HOW IT WORKS

The Quick Release Brackets make water jacket exchanges to accommodate different balloon sizes simple and easy, reducing machine set-up time and driving down costs. Interface offers a family of interchangeable water jackets, each optimized for a range of lengths and diameters to efficiently manufacture a wide range of balloon sizes.

The Quick Release Brackets are an optional feature and are provided as a separate upgrade kit to existing machines (limited to model numbers 2210 and 9810). The Quick Release Brackets provide an additional feature with a mechanical index that restricts water jackets to the proper 110V or 220V machine.

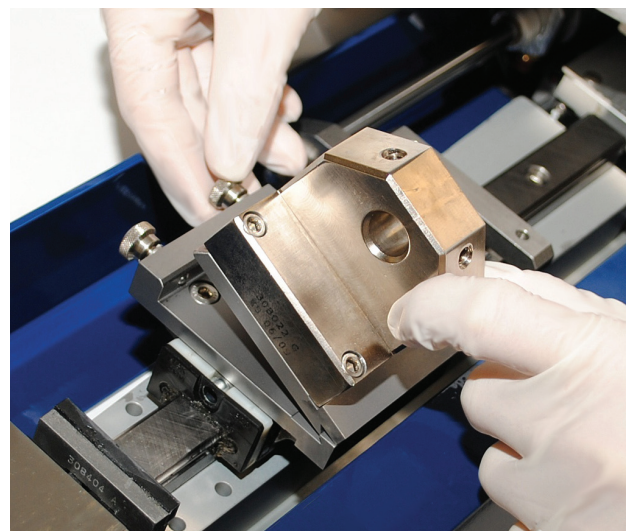

SPECIFICATIONS

The Quick Release Brackets are available as an Equipment Upgrade Kit and Water Jacket and End Plug Holder Upgrade Kit for each available WJ/EPH.

- Equipment upgrade kit to modify the Balloon Forming Machine
- WJ/EPH upgrade kit to modify the water jacket and end plug holder to work with modified BFM*

110V BALLOON FORMING MACHINE†

| Quick Release BFM Upgrade Kit | WJ/EPH Upgrade Kit |
|-------------------------------|--------------------|
| Part Number 506057 | Part Number 506059 |

220V BALLOON FORMING MACHINE†

| Quick Release BFM Upgrade Kit | WJ/EPH Upgrade Kit |
|-------------------------------|--------------------|
| Part Number 506058 | Part Number 506060 |

*Quick Release Brackets are standard on 3310 models. WJ/EPH upgrade kits need to be ordered with new water jackets and end plugs.

†Limited to model numbers 2210 and 9810